 


Use & Care for Converter/Adaptor Kit

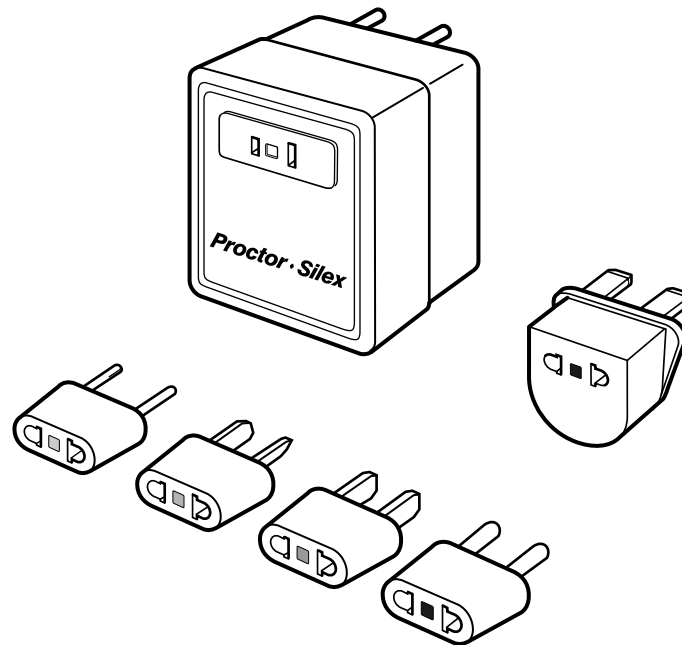

Customer Service Number

In USA: 1-800-851-8900 (8:00 AM to 5:00 PM EST)
Web Site Address – <http://www.hambeach.com>
Keep this number for future reference!

SAFETY WARNINGS

1. Read and review instructions before using the Converter/Adaptor Kit.
2. This converter is not to be used with D.C. (Direct Current) electrical outlets.
3. *Never* plug converter directly into a 110V outlet. Always use on a 220V system.
4. Do not leave converter or adaptor unattended when in use. Unplug immediately after using.
5. If your converter or adaptor is not functioning properly, DO NOT USE. Call our toll free customer service number for information on repair, replacement or adjustment.
6. Whether for use at home or when traveling, always follow the manufacturer's instructions for proper usage of this electrical system.
7. Check the product you intend to use for the manufacturer's voltage and/or wattage rating, which should be located on the product before using the kit.
8. The converter has a replaceable fuse. Should your appliance have a built in thermostat - a premature shut off does not signal a malfunction in either the appliance or converter.
9. Keep converter away from heated/hot surfaces.
10. Save these instructions.

DO NOT USE ANY APPLIANCE EQUIPPED WITH AN ALCI (GROUND FAULT INTERRUPTER) WITH THIS PRODUCT. HAIR DRYERS MANUFACTURED AFTER JAN. 1, 1992 MAY CONTAIN AN ALCI WHICH WOULD INCLUDE AN ELECTRONIC CIRCUIT AND COMPONENTS. DO NOT USE WITH THIS PRODUCT.

NOTE: NEVER USE THIS CONVERTER WITH PRODUCTS CONTAINING ELECTRONIC CIRCUITRY I.E. COMPUTERS, STEREOS, AND MANY DIGITAL PRODUCTS. CHECK THE INSTRUCTION MANUAL.

DO NOT PLUG A 220V CONVERTER DIRECTLY INTO A 110V DOMESTIC OUTLET.

DO NOT USE THIS CONVERTER WITH LOW WATTAGE APPLIANCES WHICH DRAW LESS THAN 50 WATTS, SUCH AS RAZORS AND RADIOS.

DO NOT USE THIS CONVERTER WITH CLOCKS.

CONVERTER/ADAPTOR PLUG USE


Most foreign countries operate on 220-240 VAC. Most appliances sold in the U.S. are manufactured to operate on 110-120 VAC. This Converter allows you to convert the voltage.

Only use this Converter with appliances designed for A.C. operation. Do not use with D.C. (Direct Current) systems found on ships, planes and in some foreign countries.

Some appliances are now being offered with dual voltage feature which allows you to use either 110V or 220V, you will not need to use a converter. After making sure your voltage switch is in the proper voltage mode (110V or 220V), you may need to use an Adaptor Plug. These Adaptor Plugs will allow U.S. flat plugs to fit most Foreign Outlets.

CONVERTER:


The Converter allows 110-120V products to be used in a 220-240V system. Most foreign countries operate on a 220-240V system. If you were to use a 110-120V appliance in a 220-240V system without a Converter the appliance would be damaged.

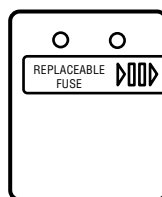


Yellow

ADAPTOR PLUGS:

 
Adaptor Plugs are used to adapt dual voltage appliances to fit various wall outlets in foreign countries. Adaptor Plugs may also be needed when using the Converter.




Europe - Yellow

 


United Kingdom - Red

 

Australia - Green

 

North & South America - Blue

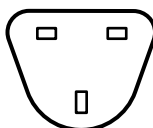

United Kingdom
(Bathroom) - Red

HOW TO USE CONVERTER WITH 220V SYSTEM

If your appliance is not dual voltage and rated 110V or 120V and the wattage is between 50 to 1600, then use of the 1600 watt converter is necessary.

1. In Europe plug Converter into wall outlet, then plug appliance into Converter.
2. If the plug of the Converter does not fit into the outlet, connect appropriate Adaptor Plug to wall outlet first. Then plug appliance into Converter. Last connect Converter to the Adaptor plug in the outlet.

TWO YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of two (2) years from the date of original purchase, except as noted. There is no warranty with respect to the following, which may be supplied with this appliance: glass parts, glass containers, cutter/strainer, nonstick soleplate and/or nonstick cooking surfaces. This warranty extends only to the original consumer purchaser and does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL DAMAGES OR INCIDENTAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

In the U.S. 1-800-851-8900

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

